



Alterar IP de LAN


DIR-600

DIR-600



Procedimentos para alterar o endereço IP de LAN do roteador

1-Para realizar o procedimento de alteração do IP de Lan, o computador deve estar conectado via cabo Ethernet à porta LAN do DIR-600 e este deve estar ligado a energia.

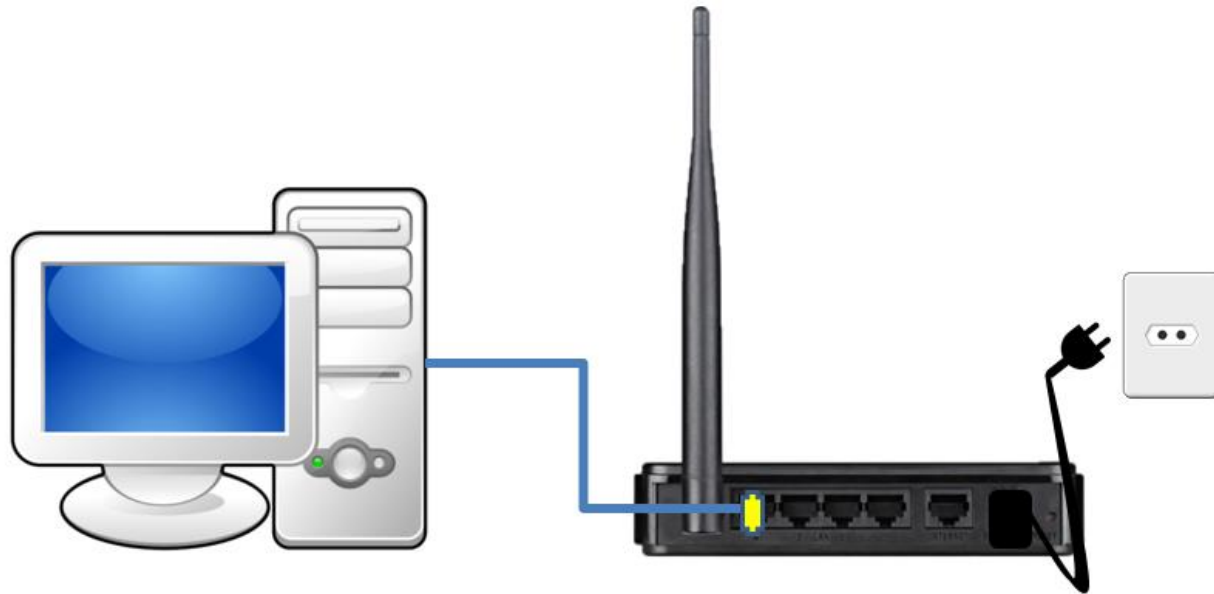

Obs.: Para realizar estes procedimentos não é necessário estar conectado à internet.

2- Para acessar a página de configuração abra o navegador de internet, digite na barra de endereços <http://192.168.0.1> e tecla **Enter**.



Será apresentada a tela de autenticação para acesso a página de configuração.

A screenshot of the D-Link login page for a DIR-600 router. The page has an orange header with the D-Link logo. Below the header, it says 'Product Page : DIR-600' and 'Hardware Version : B1 Firmware Version : 2.00'. The main content area is titled 'LOGIN' and contains the text 'Log in to the router:'. There are three input fields: 'User Name' with 'admin' entered, 'Password' (empty), and a CAPTCHA field labeled 'below.' with the text 'HTDMF' and a 'Regenerate' button. A 'Log In' button is at the bottom.

O usuário e senha padrão do equipamento são:

Nome de Usuário: Admin

Senha: *(deixe em branco)*

Confirme os caracteres no campo Below

Clique em **Login**.

3- Com a tela de configuração aberta clique no botão **LAN Setup** localizado à esquerda da página.

Product Page : DIR-600 Hardware Version : B1 Firmware Version : 2.00



DIR-600	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Internet Setup	INTERNET CONNECTION If you are configuring the device for the first time, we recommend that you click on the Internet Connection Setup Wizard button and follow the instructions on the screen. If you wish to modify or configure the device settings manually, click the Manual Internet Connection Setup button. INTERNET CONNECTION SETUP WIZARD If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your new D-Link Systems Router to the Internet, click on the button below. Internet Connection Setup Wizard Note: Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.				Helpful Hints.. • If you are new to networking and have never configured a router before, click on Internet Connection Setup Wizard and the router will guide you through a few simple steps to get your network up and running. • If you consider yourself an advanced user and have configured a router before, click Manual Internet Connection Setup to input all the settings manually.
Wireless Setup					
LAN Setup					
Time and Date					
Parental Control					
Logout					

4- Na página de **LAN Setup** você pode alterar o IP Address do equipamento.

Product Page : DIR-600 Hardware Version : B1 Firmware Version : 2.00

D-Link

DIR-600	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Internet Setup Wireless Setup LAN Setup Time and Date Parental Control Logout	NETWORK SETTING Use this section to configure the internal network settings of your router and also to configure the built-in DHCP server to assign IP addresses to computers on your network. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address in this section, you may need to adjust your PC's network settings to access the network again. Please note that this section is optional and you do not need to change any of the settings here to get your network up and running. Save Settings Don't Save Settings ROUTER SETTINGS Use this section to configure the internal network settings of your router. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again. Router IP Address : 192.168.0.1 Default Subnet Mask : 255.255.255.0 Local Domain Name : Enable DNS Relay : ☒ DHCP SERVER SETTINGS Use this section to configure the built-in DHCP server to assign IP address to the computers on your network. Enable DHCP Server : ☒ DHCP IP Address Range : 100 to 199 (addresses within the LAN subnet) DHCP Lease Time : 1440 (minutes)				Helpful Hints.. If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, uncheck Enable DHCP Server to disable this feature.

Por exemplo:

Router IP Address: **Digite o endereço IP (ex: 192.168.2.1)**

Default Subnet Mask: **Digite a máscara de sub-rede (ex: 255.255.255.0)**

Local Domain Name: **Você pode deixar sem preencher esse campo é opcional.**

